



## INSTRUCTION SHEET K6855738AB SHIFTER INTERLOCK LEVER REPLACEMENT

Vehicle(s): 300/Charger/Magnum | Model year(s): 2005-07

1. Remove Shifter from vehicle (refer to 21-Transmission & Transfer Case / Automatic / Interlock / Shifter / Removal - Floor Mount).
2. Disconnect the wiring connector from the module, if so equipped.



3. Remove shifter cover from shifter base, by prying the three tabs with a screw driver.
4. Remove and discard the failed Key Interlock Lever, by manipulating shifter components per the arrows below:



5. Remove and discard old spring.
6. Install new Interlock Lever and new spring per the below. Discard other new spring.


**Important:** Color-match new Lever Spring to existing shifter rod spring per below:

Shifter Rod Spring	New Lever Spring
1. White (painted)	Blue Sleeve
2. Black (non-painted)	Green Sleeve




7. Move shifter back to Park position.

**Important:** See below graphics to insure proper installation of shifter components. Manipulate Brake Interlock Lever and shifter rod until the shifter is installed as below, in the Park position.

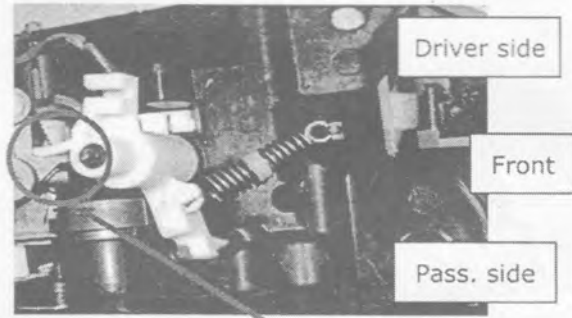

**Proper Installation:** Black tab on shifter rod is on Passenger side, White Lever tab on driver side.

8. Install shifter cover back on base.
9. Press the manual brake Interlock switch (top rear passenger side), and insure shifter rod can be freely moved over its range. Return to Park position.
10. Connect the wiring connector to the module, if so equipped.

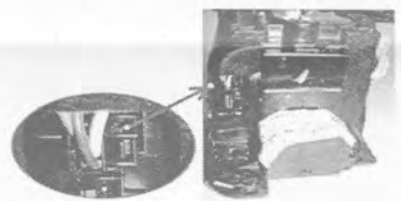

11. Install Shifter in vehicle (refer to 21-Transmission and Transfer Case/Automatic / Interlock / Shifter / Installation - Floor Mount).